



DIRECTIONS


The Gallery System Push Button Hook & Clearline Push Button Hook (black)

The Gallery System Push Button Hooks are for use with The Gallery System Stainless Steel Cable Hangers. The Clearline Push Button Hooks (black) are for use with The Gallery System Clearline Hangers.

NOTE: All Push Button hooks function in the same manner.

DIRECTIONS:

Feed the hanger into the hole in the top of the hook.
Push the button down and the hook will move freely on the hanger.
The hook grips the hanger when the button is released.

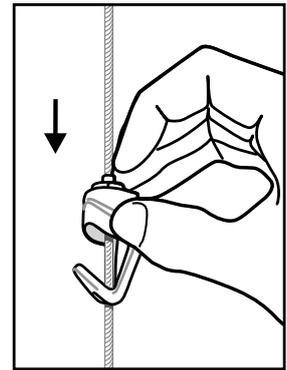

RECOMMENDED WEIGHT:

See [The Gallery System Weight Guide below for maximum weight specifications and compatibility of hangers and hooks.](#)

The Gallery System Weight Guide To Hangers & Hooks

NOTE: Maximum weights below can be doubled when using two hangers and hooks per picture.

| | The Gallery System Allen Key Hooks | The Gallery System Push Button Hooks | Clearline Push Button Hooks (black) | Slimline Mini Hooks | The Gallery System Push Button Security Hooks |
|--|------------------------------------|--------------------------------------|-------------------------------------|---------------------|---|
| The Gallery System Clear Tape Hangers | ✓ Max 15kg | | | | |
| The Gallery System Clearline Hangers | | | ✓ Max 6kg | ✓ Max 8kg | |
| The Gallery System Stainless Steel Cable Hangers | ✓ Max 20kg | ✓ Max 20kg | ✓ Max 6kg | | ✓ Max 20kg |

IMPORTANT: Use two hangers and hooks for all pictures weighing over recommended maximum weight. During the hanging process using two hangers and hooks, ensure weight of the picture is evenly distributed on both hooks at ALL times. This will prevent overloading one hook which may result in damage to the hook or hanger.